

The Alu-Bast collection by ONE A is a modular

The collection consists of two main components,

respectively in aluminium and alabaster, both

An elegant soft light is emitted through the

alabaster stone, creating a cozy atmosphere.

300 mm

available in different lengths.

120 mm

system, which can be assembled in various

Alu-Bast

TUBE

constellations.

ALU-BAST 230V - PENDANT

DATA

Collection	ONE A
Product	ALU-BAST
Article no.	1A13.4391.xx65 (Tube 120, Alu
	1A13.4392.xx65 (Tube 120, Alu

ubaster 50) lubaster 120) 1A13.4393.xx65 (Tube 120, Alubaster 210) 1A13.4394.xx65 (Tube 120, Alubaster 300) 1A13.4491.xx65 (Tube 300, Alubaster 50) 1A13.4492.xx65 (Tube 300, Alubaster 120) 1A13.4493.xx65 (Tube 300, Alubaster 210) 1A13.4494.xx65 (Tube 300, Alubaster 300)

SPECIFICATIONS

Weight Material Power Voltage IP protection grade LED CCT Lumen Efficiency CRI Dimmable Lifespan Labelling Insulation class IES/LDT **Energy Classifications** 0.78kg - 2.4kg Aluminium, Alabaster 6W AC200 - 240V 50/60Hz **IP20** BRIDGELUX COB LED (light source included) 2500K (Due to alabast - variations will occur) 100-200lm 35-40lm/W 90+ Triac dimmable >40.000Hrs CE Class II

For IES/LDT lux files review – LUX FILES 🔰

ENERG[†]



ALUBASTER 300 21





The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment.

	Α			В			С			D			E			F			G			
Dimmer		VADSBO VD200		NIKO (310-016)		BUSCH (6523U)		OPUS (T39.01)			OPUS (39.07)			OPUS (T39.08)			OPUS (T46.03)					
Driver code		Resul t	Pmax	Pmin	Result	Pmax	Pmin	Result	Pmax	Pmin	Result	Pmax	Pmin	Result	Pmax	Pmin	Result	Pmax	Pmin	Result	Pmax	Pmin
1AL. 19. 27. 15	200\	small	5.121	0.512	1	4.993	0.853	1	5.207	turn off	1	5.207	0.853	1	5.164	0.725	1	5.249	0.64	1	5.292	2.006
	240\	flesh at the low	5.804	0.768	1	6.103	1.835	1	6.316	turn off	1	6.7	1.237	1	6.658	1.067	1	6.572	0.939	smill flash at the high soint	5.633	2.859
	264\	point	5.804	0.939	1	6.487	3.414	1	6.487	0.811	\checkmark	6.828	1.494	1	6.786	1.28	1	6.7	1.109	smill flash at the high soint	5.761	3.414

XX - COLOUR CODES

 
01 - White Grey Textile cable



53 - Elephant Grey CB* Grey Textile cable







NOTE

3m cord included.

Due to pendant weight, some AluBast pendants are delivered including a metal wire. The metal wire can be fixed to Storm Output - see technical info for more information

(*) Cross brushed finish



ONE A reserves the rights to change and/or update product information and accepts no liability for any printing error last updated 26 - 04 - 2023

IMPORTANT INFORMATION

Installation and mounting must be performed by a certified electrician only, and instructions must be followed.

CLEANING AND MAINTENANCE: Use a soft moist cloth for cleaning. No further maintenance is required.

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

COMPONENTS

- AluBast
 - wire
 - light source
 - allen key



 
ALU-BAST PENDANT

ASSEMBLY INSTRUCTION page 1 of 2

STEP 1

Connect the cables

Please refer to Storm Output assembly instructions or other outlet




INSTRUCTIONS TO CHANGE LIGHT SOURCE

STEP 1

To remove Alabaster Part:

- With the accompanying allen key turn the screw clockwise until the Alabaster part can rotate
- 2. Take hold of the Alabaster part, then gently pull down, whilst slightly rotating

 NOTE: When rotating the fixture choose the direction with the least resistance.



STEP 2

- 1. Turn the 3 screws anti-clockwise using the allen key.
- 2. Remove the retaining ring using light pressure.

 
Then replace the light source, reattach the retaining ring, make sure it snaps. Finally, fasten the 3 screws, so that they are flush with the fixture ring.



STEP 3

- Remount the Alabaster part in the Tube, by gently rotating until the allen screw aligns with the hole in the Tube.
- 2. Secure the Alabaster part in place by turning the screw anti-clockwise untill the screw is flush with the tube.

NOTE: When rotating the fixture choose the direction with the least resistance.




ALU-BAST PENDANT

ASSEMBLY INSTRUCTION page 2 of 2


Suspension wire can be mounted in Storm Output, for further information refer to Storm Output's technical information.

Feed the accompanying steel wire throught the small hole in Storm Output, then fasten the screw

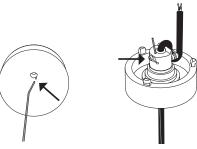


WIRE SUSPENSION ASSEMBLY INSTRUCTION

 
STEP 1 Mount the wire suspension to the ceiling with a screw.



 STEP 2 Mount the wire lock in the wire suspension.



 STEP 3 Guide the wire through the wire lock



STEP 4

Then pull the wire out through the slot



IMPORTANT INFORMATION

Disassembly must be performed by a certified electrician only, and instructions must be followed.

WARRANTY:

If the product is defect, please contact your supplier immediately. Please note that warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair.

ALU-BAST PENDANT

DISASSEMBLY INSTRUCTION

STEP 1

Disconnect the cables

Please refer to Storm Output assembly instructions or other outlet

